# Fittings and Tubing

# Low Pressure

## Pressures to 15,000 psi (1034 bar)

Since 1945 Autoclave Engineers has designed and built premium quality valves, fittings and tubing. This commitment to engineering and manufacturing excellence has earned Autoclave a reputation for reliable, efficient product performance. Autoclave Engineers has long been established as the world leader in high pressure fluid handling components for the chemical/petrochemical, research, and oil and gas industries.

# Low Pressure Fittings and Tubing Features:

- Single-ferrule compression sleeve.
- Fast easy make-up of connection.
- Available sizes are 1/16", 1/8", 1/4", 3/8", & 1/2".
- Fittings manufactured from cold worked 316 stainless steel.
- Tubing is manufactured from dual rated 316/316L and 304/304L annealed stainless steel.
- All items available in special materials.
- Operating temperatures from -100°F (-73°C) to 650°F (343°C).
- Molybdenum disulfide-coated gland nuts to prevent galling.

The Low Pressure Series uses Autoclave's SpeedBite connection. This single-ferrule compression sleeve connection delivers fast, easy make-up and reliable bubble-tight performance, in liquid or gas service.







Fluid Components Division of Snap-tite, Inc. *WWW.autoclave.com* 

# Fittings and Tubing - Low Pressure Fittings


### Pressures to 15,000 psi (1034 bar)

Autoclave Engineers Low Pressure Fittings are designed for use with low pressure valves and tubing. These fittings feature improved SpeedBite compression connections with larger orifices for excellent flow capabilities. Autoclave fittings and components are manufactured of cold-worked type 316 stainless steel. Optional materials are available upon request.



### **Connection Components**

All valves and fittings are supplied complete with appropriate glands and compression sleeves. To order these components separately, use order numbers listed. When using plug, sleeve is not required.



Gland SMN ( )

Add tube size ( ) 1/8" - 20

1/4" - 40


3/8" - 60

1/2" - 80

#### Example: 1/4" Gland - SMN 40

Note: Special material glands may be supplied with four flats in place of standard hex.

Sleeve SSL ( )



**†** When ordering glands separately for 10V Series 1/4" and 3/8" valves, substitute 10N for SMN.

1/16" tubing system components are available in the mini-fitting series. 1/16" tubing components can be used in 10V Series valves and fittings if required. Consult factory for information on 1/16" tubing assembly in 1/8" tubing components.

To ensure proper fit use Autoclave Engineers tubing. For mounting hole option add suffix PM to catalog number. Consult factory for mounting hole dimensions.

Catalog	Catalog Connection Di	Outside	Pressure	Minimum		C	Dimensio	ons - incl	nes (mm	)		Block	Fitting
Number	Туре	Diameter Tube	Rating psi (bar)*	Opening	А	В	С	D Typical	E	F	G Thickness	Thickness	Pattern


#### Elbow

SL2200	W125	1/8	15,000	0.094	1.00	1.50	0.31	0.50	0.75	0.75	0.62	
		(3.18)	(1034.19)	(2.39)	(25.40)	(38.10)	(7.87)	(12.70)	(19.05)	(19.05)	(15.75)	
SL4400	SW250	1/4	15,000	0.188	1.38	2.00	0.44	0.63	1.00	1.00	0.75	0
		(6.35)	(1034.19)	(4.78)	(35.05)	(50.80)	(11.18)	(15.88)	(25.40)	(25.40)	(19.05)	See
SL6600	SW375	3/8	15,000	0.250	1.38	2.00	0.53	0.75	1.00	1.00	0.75	Figure 1
		(9.53)	(1034.19)	(6.35)	(35.05)	(50.80)	(13.46)	(19.05)	(25.40)	(25.40)	(19.05)	
SL8800	SW500	1/2	10,000	0.375	1.75	2.50	0.53	0.93	1.25	1.25	1.00	
		(12.70)	(689.46)	(9.53)	(44.45)	(63.50)	(13.46)	(23.62)	(31.75)	(31.75)	(25.40)	

\*Maximum pressure rating is based on the lowest rating of any component.

Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change. For prompt service, Autoclave stocks select products. Consult your local representative.

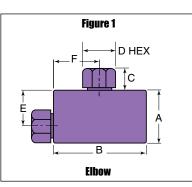

Catalog	Connection	Outside	Pressure	Minimum		Γ	Dimensio	ons - incl	nes (mm	)		Block	Fitting
Number	Туре	Diameter Tube	Rating psi (bar)*	Opening	А	В	С	D Typical	Е	F	G Thickness	Thickness	Pattern

_		
T	O	O
	G	G


ST2220	W125	1/8	15,000	0.094	1.00	1.50	0.31	0.50	0.75	0.75	0.62	
		(3.18)	(1034.19)	(2.39)	(25.40)	(38.10)	(7.87)	(12.70)	(19.05)	(19.05)	(15.75)	
ST4440	SW250	1/4	15,000	0.188	1.38	2.00	0.44	0.63	1.00	1.00	0.75	Coo
		(6.35)	(1034.19)	(4.78)	(35.05)	(50.80)	(11.18)	(15.88)	(25.40)	(25.40)	(19.05)	See
ST6660	SW375	3/8	15,000	0.250	1.38	2.00	0.53	0.75	1.00	1.00	0.75	Figure 2
		(9.53)	(1034.19)	(6.35)	(35.05)	(50.80)	(13.46)	(19.05)	(25.40)	(25.40)	(19.05)	
ST8880	SW500	1/2	10,000	0.375	1.75	2.50	0.53	0.93	1.25	1.25	1.00	
		(12.70)	(689.46)	(9.53)	(44.45)	(63.50)	(13.46)	(23.62)	(31.75)	(31.75)	(25.40)	
ross												
SX2222	W125	1/8	15,000	0.094	1.50	1.50	0.31	0.50	0.75	0.75	0.62	
		(3.18)	(1034.19)	(2.39)	(38.10)	(38.10)	(7.87)	(12.70)	(19.05)	(19.05)	(15.75)	
SX4444	SW250	1/4	15,000	0.188	2.00	2.00	0.44	0.63	1.00	1.00	0.75	0
		(6.35)	(1034.19)	(4.78)	(50.80)	(50.80)	(11.18)	(15.88)	(25.40)	(25.40)	(19.05)	See
SX6666	SW375	3/8	15,000	0.250	2.00	2.00	0.53	0.75	1.00	1.00	0.75	Figure 3
		(9.53)	(1034.19)	(6.35)	(50.80)	(50.80)	(13.46)	(19.05)	(25.40)	(25.40)	(19.05)	
SX8888	SW500	1/2	10,000	0.375	2.50	2.50	0.53	0.93	1.25	1.25	1.00	
	1	(12.70)	(689.46)	(9.53)	(63.50)	(63.50)	(13.46)		(31.75)	(31.75)	(25.40)	


#### **Straight Coupling**


15F2211	W125	1/8	15,000	0.094	0.50	1.25	0.31	0.50			
		(3.18)	(1034.19)	(2.39)	(12.70)	(31.75)	(7.87)	(12.70)			
6F4422	SW250	1/4	15,000	0.188	0.62	1.62	0.44	0.63			0
		(6.35)	(1034.19)	(4.78)	(15.75)	(41.15)	(11.18)	(15.88)			See
6F6622	SW375	3/8	15,000	0.250	0.75	1.75	0.53	0.75			Figure 4
		(9.53)	(1034.19)	(6.35)	(19.05)	(44.45)	(13.46)	(19.05)			
4F8822	SW500	1/2	10,000	0.375	1.00	2.00	0.53	0.93			
		(12.70)	(689.46)	(9.53)	(25.40)	(50.80)	(13.46)	(23.62)			


#### **Bulkhead Coupling**

15BF2211	W125	1/8 (3.18)	15,000 (1034.19)	0.094 (2.39)	0.690 (17.53)	1.75 (44.45)	0.31 (7.87)	0.50 (12.70)	0.38 (9.65)	0.75 (19.05)	0.38 (9.65)	
6BF4422	SW250	1/4	15,000	0.188	0.940	1.88	0.44	0.63	0.50	1.00	0.38	0
		(6.35)	(1034.19)	(4.78)	(23.88)	(47.75)	(11.18)	(15.88)	(12.70)	(25.40)	(9.65)	See
6BF6622	SW375	3/8	15,000	0.250	0.940	1.88	0.53	0.75	0.50	1.00	0.38	Figure 5
		(9.53)	(1034.19)	(6.35)	(23.88)	(47.75)	(13.46)	(19.05)	(12.70)	(25.40)	(9.65)	
4BF8822	SW500	1/2	10,000	0.375	1.120	2.38	0.53	0.93	0.78	1.38	0.38	
		(12.70)	(689.46)	(9.53)	(28.45)	(60.45)	(13.46)	(23.62)	(19.81)	(35.05)	(9.65)	

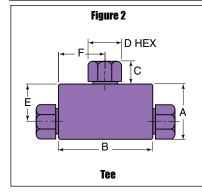

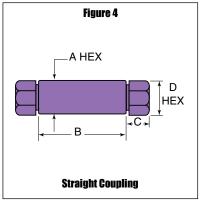

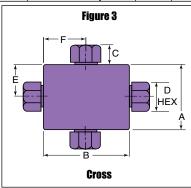

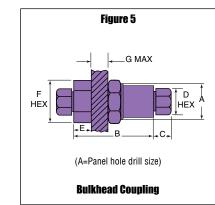


\*Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change. For prompt service, Autoclave stocks select products. Consult your local representative.

# Fittings and Tubing - Mini Series Fittings

### Pressure to 15,000 psi (1034 bar)

All Autoclave Engineers valves and fittings are supplied complete with appropriate glands and compression sleeves. To order these components separately, use order numbers listed. When using plug, sleeve is not required.

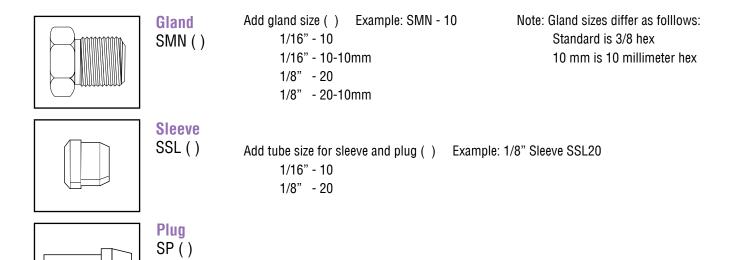

Note: Special material glands may be supplied with four flats in place of standard hex.


Catalog	Connection	Outside	Pressure	Minimum		[	Dimensio	ons - incl	nes (mm	)	Block	Fitting
Number		Diameter Tube	Rating psi (bar)*	Opening	A	В	С	D Typical	Е	F	Thickness	Pattern

Elbow				3/8 incl	hex glands (	D Dimensio	on)						
MLE1100	W062	1/16	15,000	0.055	1.00	1.00	0.31	0.38	0.69	0.69		0.56	
		(1.59)	(1034.20)	(1.40)	(25.40)	(25.40)	(7.87)	(9.65)	(17.45)	(17.45)		(14.27)	
MLE2200	W125	1/8	15,000	0.093	1.00	1.00	0.31	0.38	0.69	0.69		0.56	
		(3.18)	(1034.20)	(2.36)	(25.40)	(25.40)	(7.87)	(9.65)	(17.45)	(17.45)		(14.27)	0
10 millimeter hex glands (D Dimension)													See Figure 1
ML1100	W062	1/16	15,000	0.055	1.00	1.00	0.31	0.39	0.69	0.69		0.56	-
		(1.59)	(1034.20)	(1.40)	(25.40)	(25.40)	(7.87)	(10.00)	(17.45)	(17.45)		(14.27)	
ML2200	W125	1/8	15,000	0.093	1.00	1.00	0.31	0.39	0.69	0.69		0.56	
		(3.18)	(1034.20)	(2.36)	(25.40)	(25.40)	(7.87)	(10.00)	(17.45)	(17.45)		(14.27)	

\*Maximum pressure rating is based on the lowest rating of any component.

Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change. For prompt service, Autoclave stocks select products. Consult your local representative.

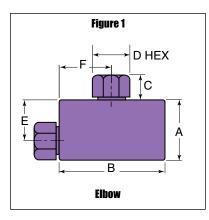

Catalog	Connection	Outside	Pressure	Minimum		Γ	Dimensio	ons - incl	nes (mm	)	Block	Fitting
Number	Туре	Diameter Tube	Rating psi (bar)*	Opening	A	В	С	D Typical	E	F	Thickness	Pattern

Tee				3/8 inch h	ex glands (	D Dimensio	on)							
MTE1110	W062	1/16	15,000	0.055	1.00	1.38	0.31	0.38	0.69	0.69		0.56		
		(1.59)	(1034.20)	(1.40)	(25.40)	(34.93)	(7.87)	(9.65)	(17.45)	(17.45)		(14.27)		
MTE2220	W125	1/8	15,000	0.093	1.00	1.38	0.31	0.38	0.69	0.69		0.56		
		(3.18)	(1034.20)	(2.36)	(25.40)	(34.93)	(7.87)	(9.65)	(17.45)	(17.45)		(14.27)	See	
	10 millimeter hex glands (D Dimension)													
MT1110	W062	1/16	15,000	0.055	1.00	1.38	0.31	0.39	0.69	0.69		0.56		
		(1.59)	(1034.20)	(1.40)	(25.40)	(34.93)	(7.87)	(10.00)	(17.45)	(17.45)		(14.27)		
MT2220	W125	1/8	15,000	0.093	1.00	1.38	0.31	0.39	0.69	0.69		0.56		
		(3.18)	(1034.20)	(2.36)	(25.40)	(34.93)	(7.87)	(10.00)	(17.45)	(17.45)		(14.27)		

#### Cross

#### 3/8 inch hex glands (D Dimension)

MXE1111	W062	1/16	15,000	0.055	1.38	1.38	0.31	0.38	0.69	0.69		0.56			
		(1.59)	(1034.20)	(1.40)	(34.93)	(34.93)	(7.87)	(9.65)	(17.45)	(17.45)		(14.27)			
MXE2222	W125	1/8	15,000	0.093	1.38	1.38	0.31	0.38	0.69	0.69		0.56			
		(3.18)	(1034.20)	(2.36)	(34.93)	(34.93)	(7.87)	(9.65)	(17.45)	(17.45)		(14.27)	See		
	10 millimeter hex glands (D Dimension)														
MX1111	W062	1/16	15,000	0.055	1.38	1.38	0.31	0.39	0.69	0.69		0.56			
		(1.59)	(1034.20)	(1.40)	(34.93)	(34.93)	(7.87)	(10.00)	(17.45)	(17.45)		(14.27)			
MX2222	W125	1/8	15,000	0.093	1.38	1.38	0.31	0.39	0.69	0.69		0.56			
		(3.18)	(1034.20)	(2.36)	(34.93)	(34.93)	(7.87)	(10.00)	(17.45)	(17.45)		(14.27)			

#### **Straight Couplings**

#### 3/8 inch hex glands (D Dimension)


MCE1100	W062	1/16 (1.59)	15,000 (1034.20)	0.055	0.50 (12.70)	1.25 (31.75)	0.31 (7.87)	0.38 (9.65)					
MCE2200	W125	1/8 (3.18)	15,000 (1034.20)	0.093 (2.36)	0.50 (12.70)	1.25 (31.75)	0.31 (7.87)	0.38 (9.65)					See
	10 millimeter hex glands (D Dimension)												
MC1100	W062	1/16 ( <b>1.59</b> )	15,000 (1034.20)	0.055 (1.40)	0.50 (12.70)	1.25 (31.75)	0.31 (7.87)	0.39 (10.00)					-
MC2200	W125	1/8 (3.18)	15,000 (1034.20)	0.093 (2.36)	0.50 ( <b>12.70</b> )	1.25 (31.75)	0.31 (7.87)	0.39 (10.00)					


\*Maximum pressure rating is based on the lowest rating of any component.


Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change.

For prompt service, Autoclave stocks select products. Consult your local representative.

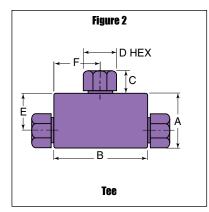

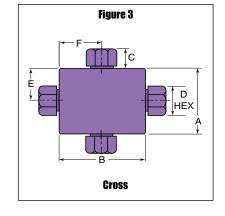

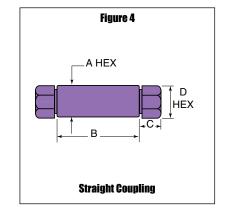

# Fittings and Tubing - Low Pressure Tubing

### Pressures to 15,000 psi (1034 bar)

Autoclave Engineers offers a complete selection of annealed, seamless stainless steel tubing designed to match the performance standards of Autoclave low pressure valves and fittings. Autoclave low pressure tubing is furnished in random lengths between 20 feet (6 meters) and 26.5 feet (8.0 meters). The average is 24 feet



Tolerance/Outside Diameter

.064/.062 (1.62/1.57)

.128/.125 (3.25/3.18)

.254/.250 (6.45/6.35)

.379/.375 (9.74/9.53)

.505/.500 (12.83/12.70)

inches (mm)

(7.3 meters). The tubing is available in five sizes and a variety of materials. In order to ensure proper sleeve "bite" into tubing, Autoclave Engineers specifies and controls the strength levels of both the tube and sleeve materials.

### **Inspection and Testing**

Autoclave Engineers low pressure tubing is inspected for compliance with specified defect restrictions as well as carburization or intergranular carbide precipitation. The tubing outside diameter and wall thickness is controlled within close tolerance to assure proper fit. Sample pieces of tube (for each lot) are tested to confirm mechanical properties for proper compression sleeve "bite" and pressure capability. Furthermore, the sample tubes are pressure tested as a final check.

**Tubing Tolerance** 

Nominal Tubing Size

inches (mm)

1/16 (1.59)

1/8 (3.18)

1/4 (6.35)

3/8 (9.53)

1/2 (12.70)

### **Special Materials**

In addition to the type 316/316L and 304/304L stainless steel tubing listed in this section, Autoclave has a limited stock of hard-to-obtain shorter lengths of the following tubing materials:

Monel 400\*, Inconel 600\*, Titanium Grade 2\*, Nickel 200\*, Hastelloy C276\* - (\* Trademark names)

Please consult factory for stock availability.

Catalog	Tube	Fits	Ti	ube Size Inches (mm	)	Flow		Workir	ng Pressure ps	i (bar)*	
Number	Materials	Connection	Outside	Inside	Wall	Area	0 - 100°F	200°F	400°F	600°F	650°F
		Туре	Diameter	Diameter	Thickness	in.² (mm²)	-17.8 to 37.8°C	93°C	204°C	316°C	343°C
MS15-070	316SS	W062	1/16	0.026	0.018	0.0005	15,000	15,000	14,400	13,600	12,600
			(1.59)	(0.66)	(0.46)	(0.32)	(1034.20)	(1034.20)	(992.83)	(937.67)	(868.73)
MS15-200	316SS			0.052	0.036	0.002	15,000	15,000	14,400	13,600	12,600
				(1.32)	(0.91)	(1.29)	(1034.20)	(1034.20)	(992.83)	(937.67)	(868.73)
MS15-151 <sup>+</sup>	304SS	1		0.062	0.032	0.003	11,650	11,050	10,050	9,900	9,850
				(1.57)	(0.81)	(1.94)	(803.23)	(751.85)	(692.91)	(682.57)	(679.12)
MS15-051	316SS	W125	1/8	0.062	0.032	0.003	11,650	11,650	11,250	10,600	9,850
			(3.18)	(1.57)	(0.81)	(1.94)	(803.23)	(803.23)	(775.65)	(730.83)	(679.12)
MS15-166 <sup>+</sup>	304SS	1		0.069	0.028	0.004	9,950	9,400	8,550	8,450	8,000
				(1.75)	(0.71)	(2.58)	(686.02)	(648.10)	(589.49)	(582.60)	(551.57)
MS15-203	316SS			0.084	0.083	0.029	15,000	15,000	14,400	13,600	12,600
				(2.13)	(2.11)	(18.71)	(1034.16)	(1034.16)	(992.83)	(937.67)	(868.73)
MS15-055	316SS	W250	1/4	0.125	0.062	0.012	11,650	11,650	11,250	10,600	9,850
		or	(6.35)	(3.18)	(1.57)	(7.74)	(803.23)	(761.86)	(775.65)	(730.83)	(679.12)
MS15-161 <sup>+</sup>	304SS	SW250		0.180	0.035	0.026	5,450	5,150	4,700	4,600	4,400
				(4.57)	(0.89)	(16.77)	(375.76)	(355.07)	(324.05)	(317.15)	(303.36)
MS15-069	316SS	1		0.180	0.035	0.026	5,450	5,450	5,250	4,950	4,600
				(4.57)	(0.89)	(16.77)	(375.76)	(375.76)	(361.97)	(341.29)	(317.15)
MS15-158	304SS			0.194	0.028	0.029	4,600	4,350	3,950	3,900	3,700
				(4.93)	(0.71)	(18.71)	(317.15)	(299.92)	(272.34)	(272.34)	(255.10)
MS15-204	316SS			0.139	0.118	0.073	15,000	15,000	14,400	13,600	12,600
				(3.53)	(3.00)	(47.10)	(1034.16)	(1034.16)	(992.83)	(937.67)	(868.73)
MS15-184	304SS	W375	3/8	0.195	0.090	0.030	10,000	9,400	8,600	8,500	8,450
		or	(9.53)	(4.95)	(2.29)	(19.35)	(689.46)	(648.10)	(592.94)	(586.05)	(582.60)
MS15-084	316SS	SW375		0.195	0.090	0.030	10,000	10,000	9,650	9,000	8,400
				(4.95)	(2.29)	(19.35)	(689.46)	(689.46)	(665.33)	(620.52)	(579.15)
MS15-155 <sup>+</sup>	304SS			0.250	0.062	0.049	7,500	7,100	6,450	6,350	6,050
				(6.35)	(1.57)	(31.61)	(517.10)	(489.52)	(444.70)	(437.81)	(417.13)

Catalog	Tube	Fits	T	ube Size Inches (mm	)	Flow		Workir	ng Pressure ps	i (bar)*	
Number	Materials	Connection	Outside	Inside	Wall	Area	0 - 100°F	200°F	400°F	600°F	650°F
		Туре	Diameter	Diameter	Thickness	in.² (mm²)	-17.8 to - 37.8°C	93°C	204°C	316°C	343°C
MS15-062	316SS	W375	3/8	0.250	0.062	0.049	7,500	7,500	7,200	6,800	6,300
		or	(9.53)	(6.35)	(1.57)	(31.61)	(517.10)	(517.10)	(496.41)	(468.84)	(434.36)
MS15-162 <sup>+</sup>	304SS	SW375		0.305	0.035	0.073	3,800	3,550	3,250	3,200	3,050
				(7.75)	(0.89)	(47.10)	(262.00)	(244.76)	(224.08)	(220.63)	(210.29)
MS15-205	316SS			0.270	0.118	0.055	10,000	10,000	9,650	9,000	8,400
				(6.86)	(3.00)	(35.48)	(689.46)	(689.46)	(665.33)	(620.52)	(579.15)
MS15-208 <sup>+</sup>	304SS	W500	1/2	0.270	0.118	0.055	10,000	9,400	8,600	8,500	8,450
		or	(12.70)	(6.86)	(3.00)	(35.48)	(689.46)	(648.10)	(592.94)	(586.05)	(582.60
MS15-065	316SS	SW500		0.375	0.062	0.110	5,500	5,500	5,250	4,950	4,600
				(9.53)	(1.57)	(70.97)	(379.21)	(379.21)	(361.97)	(341.29)	(317.15)
MS15-165	304SS			0.402	0.048	0.127	4,000	3,750	3,400	3,400	3,200
				(10.21)	(1.22)	(81.94)	(275.79)	(258.55)	(234.42)	(234.42)	(220.63)

\*Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower.


<sup>+</sup>Items are being discontinued. Contact the factory for available stock

All dimensions for reference only and subject to change. For prompt service, Autoclave stocks select products. Consult your local representative.

# Fittings and Tubing - Low Pressure Check Valves

### Pressures to 15,000 psi (1034 bar)


#### **O-Ring Check Valves**

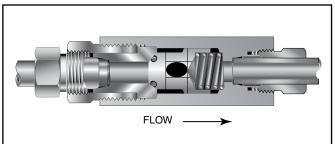

Minimum operating temperature for standard o-ring check valves 0°F (-17.8°C).

For low temperature option to -100°F (-73°C) add suffix LTTO (Low temperature spring & Teflon o-ring).

#### **Ball Check Valves**

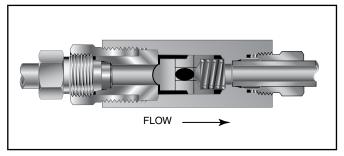

Minimum operating temperature for standard ball check valves 0°F (-17.8°C). For low temperature option to -100°F (-73°C) add suffix LT (Low temperature spring). Provide unidirectional flow and tight shut-off for liquids and gases with high reliability. When differential drops below cracking pressure\*, valve shuts off. (Not for use as relief valve.)

**Materials:** 316 Stainless Steel: body, cover, poppet and cover gland. 300 Series Stainless Steel: spring Standard O-ring: Viton, for operation to 400° F (204°C). Buna-N or Teflon available for 250°F (121°C) or 400°F (204°C) respectively; specify when ordering.

\***Cracking Pressure:** 20 psi (1.38 bar)  $\pm$ 30%. Springs for higher cracking pressures (up to 100 psi (6.89bar)) available on special order for O-ring style check valves only.

Prevent reverse flow where leak-tight shut-off is not mandatory. When differential drops below cracking pressure, valve closes. With all-metal components, valve can be used up to 650°F (343°C). See Technical Information section for connection temperature limitations. (Not for use as a relief valve.)


**Ball and poppet are an integral design** to assure positive, in-line seating without "chatter". Poppet is designed essentially for axial flow with minimum pressure drop.

**Materials:** 316 Stainless Steel: body, cover, cover gland, ball poppet. 300 Series Stainless Steel: spring

**CAUTION:** While testing has shown O-Rings to provide satisfactory service life, both cyclic and shelf life may vary widely with differing service conditions, properties of reactants, pressure and temperature cycling and age of the O-ring. FREQUENT INSPECTIONS SHOULD BE MADE to detect any deterioration, and O-rings replaced as required.

**CAUTION:** See Tubing section for proper selection of tubing. **NOTE:** For optional material see Needle Valve Options section.

#### **Ball Type Excess Flow Valves**

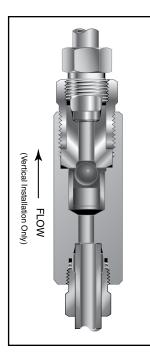


Protects pressure gauges and pressure instrumentation from sudden surges in flow or venting in the event of line failure.

**Materials:** 316 Stainless Steel: body, cover, gland nut and sleeve. 300 Series Stainless Steel: ball

Vertical Installation: Since this type of check valve employs a non-spring loaded ball, valve MUST be installed in VERTICAL position with arrow on valve body pointing UP. (cover gland up).

**Resetting Valve:** Equalize the pressure across the ball. The ball will drop and reset automatically.

#### **O-Ring Type Excess Flow Valves**

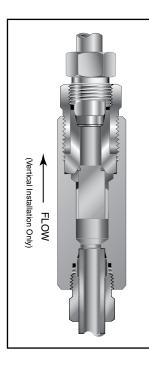

Protects pressure gauges and other pressure instrumentation from sudden surges in flow due to operator error or line failure. This valve provides dependable, tight shut-off.

**Materials:** 316 Stainless Steel: body, cover and sleeve. O-Ring: Viton for operation to 500°F (260°C). Buna-N or Teflon available for 250°F (121°C) or 400°F ( 204°C) respectively; specify when ordering.

Vertical Installation: Since this type of check valve employs a non-spring loaded poppet, valve MUST be installed in VERTI-CAL position with arrow on valve body pointing UP. (cover gland up).

**Resetting Valve:** Equalize the pressure across the poppet. The poppet will drop and reset automatically.

**CAUTION:** While testing has shown O-Rings to provide satisfactory service life, both cyclic and shelf life may vary widely with differing service conditions, properties of reactants, pressure and temperature cycling and age of the O-ring. FREQUENT INSPECTIONS SHOULD BE MADE to detect any deterioration, and O-rings replaced as required.

CAUTION: See Tubing section for proper selection of tubing. NOTE: For optional material see Needle Valve Options section.

# Fittings and Tubing - Low Pressure Check Valves

Catalog	Fits Connection	Pressure	Orifice	Rated	Dimensions - inches (mm)						
Number	Type	Rating psi (bar)*	(mm)	C <sub>V</sub>	A	В	С	D Typical	Hex		

#### **O-Ring Check Valves**

SW02200	W125	15,000	0.094	0.15	2.25	1.88	0.31	0.50	0.63
		(1034.19)	(2.39)		(57.15)	(47.75)	(7.87)	(12.70)	(15.88)
SW04400	SW250	15,000	0.188	0.63	3.18	2.56	0.44	0.63	0.81
		(1034.19)	(4.78)		(80.77)	(65.02)	(11.18)	(16.00)	(20.57)
SW06600	SW375	15,000	0.250	1.70	3.56	3.00	0.53	0.75	1.00
		(1034.19)	(6.35)		(90.42)	(76.20)	(13.46)	(19.05)	(25.40)
SW08800	SW500	10,000	0.375	3.40	4.18	3.50	0.53	0.93	1.38
		(689.46)	(9.53)		(106.17)	(88.90)	(13.46)	(23.62)	(35.05)

#### **Ball Check Valves**

SWB2200	W125	15,000	0.094	0.15	2.25	1.88	0.31	0.50	0.63
		(1034.19)	(2.39)		(57.15)	(47.75)	(7.87)	(12.70)	(15.88)
SWB4400	SW250	15,000	0.188	0.63	3.18	2.56	0.44	0.63	0.81
		(1034.19)	(4.78)		(80.77)	(65.02)	(11.18)	(16.00)	(20.57)
SWB6600	SW375	15,000	0.250	1.70	3.56	3.00	0.53	0.75	1.00
		(1034.19)	(6.35)		(90.42)	(76.20)	(13.46)	(19.05)	(25.40)
SWB8800	SW500	10,000	0.375	3.40	4.18	3.50	0.53	0.93	1.38
		(689.46)	(9.53)		(106.17)	(88.90)	(13.46)	(23.62)	(35.05)

#### **Ball Type Excess Flow Valves**

SWK2202	W125	15,000	0.094	0.012+	2.25	1.88	0.31	0.50	0.63
		(1034.19)	(2.39)		(57.15)	(47.75)	(7.87)	(12.70)	(15.88)
SWK4402	SW250	15,000	0.188	0.037+	3.18	2.56	0.44	0.63	0.81
		(1034.19)	(4.78)		(80.77)	(65.02)	(11.18)	(16.00)	(20.57)
SWK6602	SW375	15,000	0.250	0.104+	3.56	3.00	0.53	0.75	1.00
		(1034.19)	(6.35)		(90.42)	(76.20)	(13.46)	(19.05)	(25.40)
SWK8802	SW500	10,000	0.375	0.212+	4.18	3.50	0.53	0.93	1.38
		(689.46)	(9.53)		(106.17)	(88.90)	(13.46)	(23.62)	(35.05)

#### **O-Ring Type Excess Flow Valves**

SWK04400	SW-250	15,000	0.188	3++	3.12	2.56	0.44	0.63	0.81
		(1034.19)	(4.78)		(79.25)	(65.02)	(11.18)	(16.00)	(20.57)
SWK06600	SW-375	15,000	0.250	5++	3.50	3.00	0.53	0.75	1.00
		(1034.19)	(6.35)		(88.90)	(76.20)	(13.46)	(19.05)	(25.40)
SWK08800	SW-500	10,000	0.375	10++	4.31	3.50	0.53	0.93	1.38
		(689.46)	(9.53)		(109.47)	(88.90)	(13.46)	(23.62)	(35.05)

Note:

All check valves are furnished complete with connection components unless otherwise specified.

The 1/16" Tubing System is a complete system for use with all 1/8" components for pressure to 15,000 psi (1034 bar). Consult factory.


+ - Check Flow\*\* - water, GPM ++ - Check Flow\*\* - CFM, nitrogen @ 500 psi (34.47 bar), RT

\*\* - For flow using alternate fluids, consult Autoclave Engineers.

\*Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change.


For prompt service, Autoclave stocks select products. Consult your local representative.

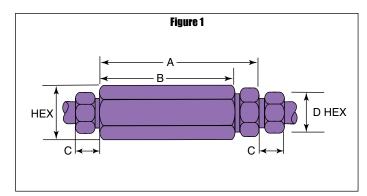

# Futnes and Tubing - Low Pressure Line Filters

### Pressures to 15,000 psi (1034 bar)

#### **Dual-Disc Line Filters**

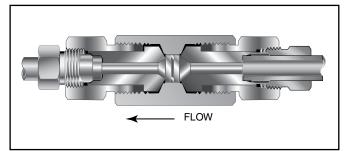


Dual-Disc Line Filters are utilized in numerous industrial, chemical processing, aerospace, nuclear and other applications. With the dual-disc design, large contaminant particles are trapped by the upstream filter element before they can reach and clog the smaller micron-size downstream element. Filter elements can be easily replaced.

**Materials:** 316 Stainless Steel: Body, covers and gland nuts. Filters: 316L Stainless Steel.

**Filter Elements:** Downstream/upstream micron size 35/65 is standard. 5/10 or 10/35 also available when specified. Other element combinations available on special order.

#### **Cup-Type Line Filters**

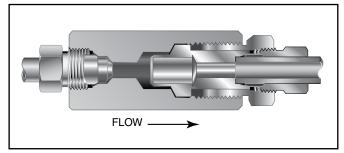

High Flow Cup-Type Line Filters are recommended in low pressure systems requiring both high flow rates and maximum filter surface area. Widely used in the industrial and chemical processing fields, the cup design offers as much as six times the effective filter area as compared to disc-type units. In addition, the filter elements can be quickly and easily replaced.

**Materials:** 316 Stainless Steel: Body, covers and gland nuts. Filter: 316L Stainless Steel.

**Filter Elements:** 300 Series Stainless Steel sintered cup. Standard elements available in choice of 5, 35 or 65 micron sizes. *Note: Filter ratings are nominal.* 

**NOTE 1:** All filters furnished complete with connection components unless otherwise specified. All dimensions for reference only and subject to change. For optional materials, see Needle Valve Options section

**NOTE 2:** Autoclave Engineers disc and cup type filters are designed to filter small amounts of process particles. It is recommended that all fluids are thoroughly cleaned prior to entering the higher pressure system.

**NOTE 3:** Special material filters may be supplied with four flats in place of standard hex.

NOTE 4: Pressure differential not to exceed 1,000 psi (69 bar) in a flowing condition.

# Fittings and Tubing - Low Pressure Line Filters

Catalog	Pressure	Orifice	Micron	Connection	Effective Filter Element	Dimensions - inches (mm)						
Number	Rating psi (bar)*	(mm)	Size**	Size and Type	Area in. <sup>2</sup> (mm <sup>2</sup> )	A	В	С	D Typical	Hex		

#### **Dual-Disc Line Filters**

SLF2200			35/65							
SLF2200-5/10	15,000 (1034.19)	.094 ( <b>2.39</b> )	5/10	W125	.06 (38.70)	2.31 (58.67)	1.25 ( <b>31.75</b> )	0.31 (7.87)	.50 ( <b>12.70</b> )	0.62 (15.74)
SLF2200-10/35	(1004.10)	(2.03)	10/35		(50.70)	(30.07)	(01.70)	(1.07)	(12.70)	(13.74)
SLF4400	15,000	.125	35/65	SW250	.15	2.94	1.68	0.44	.63	0.81
SLF4400-5/10	(1034.19)	(3.18)	5/10		(96.77)	(75.56)	(42.67)	(11.17)	(15.88)	(20.57)
SLF4400-10/35			10/35							
SLF6600	15,000	.125	35/65	SW375	.15	2.94	1.68	0.53	.75	1.00
SLF6600-5/10	(1034.19)	(3.18)	5/10	30075	(96.77)	(75.56)	(42.67)	(13.46)	(19.05)	(25.40)
SLF6600-10/35			10/35				. ,			
SLF8800	10,000	.188	35/65	SW500	.25	3.56	1.94	0.53	.93	1.18
SLF8800-5/10	(689.46)	(4.78)	5/10	344300	(161.29)	(90.42)	(49.27)	(13.46)	(23.62)	(29.97)
SLF8800-10/35		. ,	10/35		. ,					

#### **Cup-Type Line Filters**


SWF4-5	15,000	.188	5	SW250	0.81	3.18	2.56	0.44	0.63	0.81
SWF4-35	(1034.19)	(4.78)	35		(522.57)	(80.77)	(65.02)	(11.17)	(15.88)	(20.57)
SWF4-65			65							
SWF6-5	15,000	.312	5	SW375	0.81	3.56	3.00	0.53	0.75	1.00
SWF6-35	(1034.19)	(7.92)	35		(522.57)	(90.42)	(76.20)	(13.46)	(19.05)	(25.40)
SWF6-65	1		65							
SWF8-5	10.000	.438	5	SW500	1.53	4.18	3.50	0.53	.93	1.38
SWF8-35	(689.46)	(11.13)	35	3₩300	(987.09)	(106.17)	(88.90)	(13.46)	(23.62)	(35.05)
SWF8-65	1 ` ′	. ,	65		. ,	. ,	. ,	. ,	. ,	

\*\* Larger micron size filter element is installed on upstream (inlet) side. All filters furnished complete with connection components unless otherwise specified.

Other micron sizes available on special order. Change last digits of the catalog number accordingly. For optional materials, see Needle Valve Options section.

The 1/16" Tubing System is a complete system for use with all 1/8" components for pressure to 15,000 psi (1034 bar). Consult factory.

#### **Dual-Disc Line Filters**

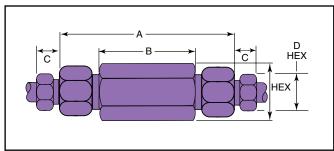


#### \*Maximum pressure rating is based on the lowest rating of any component. Actual working pressure may be determined by tubing pressure rating, if lower.

All dimensions for reference only and subject to change.

For prompt service, Autoclave stocks select products. Consult your local representative.

#### **Cup-Type Line Filters**

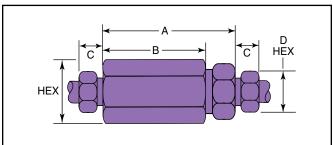

All general terms and conditions of sale, including limitations of our liability, apply to all products and services sold.

#### ! WARNING !

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND/OR PROPERTY DAMAGE. This document and other information from Snap-tite, Inc., its subsidiaries and authorized distributors, product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operation conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuming that all performance, safety and varning requirements of the applications are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Snap-tite, Inc. and its subsidiaries at any time without notice.

Snap-tite

Industrial Estate Whitemill-Wexford Republic of Ireland PH: 353 53 914 1566 FAX: 353 53 914 1582 *e-mail: ste\_sales@snap-tite.com www.snap-tite.com* 



Fluid Components Division of Snap-tite, Inc.

8325 Hessinger Drive Erie, Pennsylvania 16509-4679 USA PH: 814-838-5700 FAX: 814-860-5811 *e-mail: ae\_sales@snap-tite.com www.autoclave.com* 

#### ISO-9001 Certified

02-0123SE-1010